



4893 Artino Ct. Eureka CA 95503
 Toll Free 877-267-1642 email: mhp@Windwrap.com

Windwrap® RNS Fairing and ERX Mounts Instructions

Thank you for choosing a Mueller Human-Power windscreen. Upon unpacking, allow your fairing to straighten out for a while before installing. You may want to leave the paper mask on until the fairing is completely installed to reduce scratching.

Mounting Hardware: Mounting Hardware model number MH ERX is designed for use on Easy Racer long wheelbase (lwb) recumbent bicycles. It is made of 6061 T6 Aluminum. The joints are epoxy potted to avoid welds at the highest stress points. The ERX mount system weighs 11 ounces with wing screws.

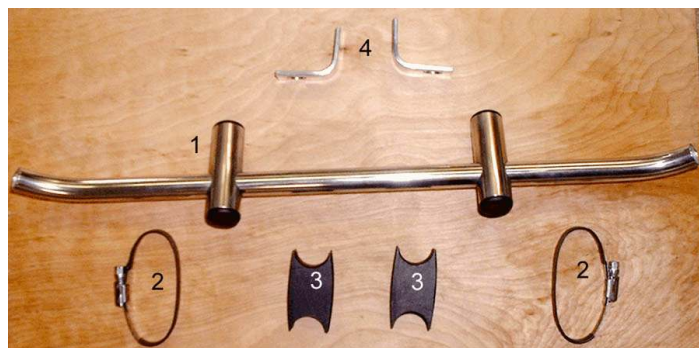


Figure 1

List of Parts:

- 1: Moustache, 1 each
- 2: Moustache Clamp, 2 each
- 3: Block, 2 each.
- 4: Angle Brackets, 2 each.
- 5: M5 x 10mm Stainless Screws 2 each (not shown)

MH GRX lower mount position.
 Note that brackets can be facing up or down depending on how high the top of the fairing needs to be.

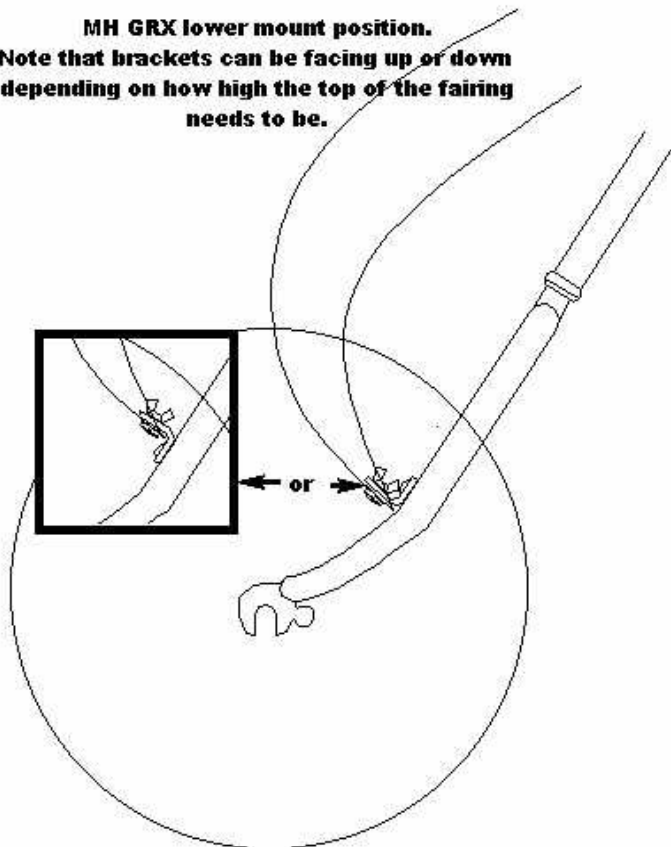


Figure 2.

The Windwrap RNS fairing which is designed to work with these mounts weighs only 2 pounds, 4 ounces. This fairing and mount combination is strong enough for use with a body sock
Installation of Mounts.


Using screws supplied (part #5) or screws in fairing bosses of fork fasten the Angle Brackets (Part #4) as shown in figure 2. The alternate position is shown also. Use the alternate position if the fairing is to be mounted higher as shown in the inset of Figure 2.

The Moustache clamps around each rise of the handlebar. Be sure that it is under any control cables so that movement of the control cables is not restricted. Place the moustache and blocks under the Moustache Clamps as shown in Figure

3. Move the Moustache assembly up and down the handlebar to adjust the fairing height and shape.

Fairing Instructions.

Polycarbonate is one of the toughest plastics but it

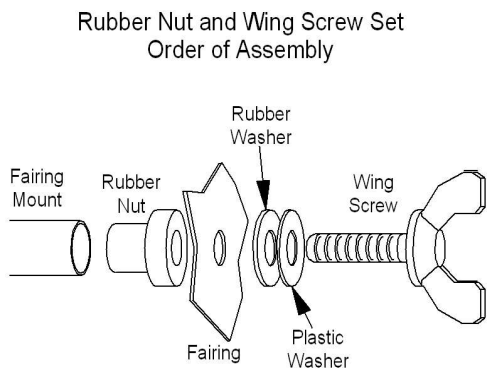

still scratches easily when compared to glass or metal. So handle carefully. Do not to slide things across the surface. Wash your hands to remove any dirt that may cause scratches. You can touch the Polycarbonate with your hands without scratching if you don't slide them across the surface.

Installation:

Fasten the fairing using the supplied rubber expanding nuts as shown.

Transport and Care of your MHP Fairing: Save the box and foam sheet that the fairing was shipped in. When you transport your bike on the car remove the fairing from the bike. Put the screws, washers and nuts in a baggy, roll the fairing in the foam sheet and place the fairing in its box.. You can also protect and store your WW RNS fairing with fairing cover model number AC STCO.


To keep your fairing in top shape handle it as little as possible. Wash with a hose or in a shower flowing plenty of water over the fairing while lightly wiping with a soft cotton cloth. Colgate

toothpaste and a wet soft cloth will remove some scuffs. Never use whitener toothpaste because it is too abrasive. Restore luster with Miguire's Car Wax. Also scratch removal compounds like Mirror Glaze can be found or ordered at art supplies (picture framing,) auto supplies, motorcycle shops, and plastic shops.

If things just aren't working right please give me a call toll free. I will do my best to help you out. 1-877-267-1645

Wishing you lots of bug free smiling!

Mark E. Mueller

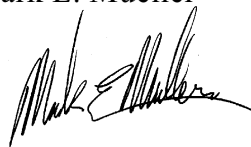

owner, Mueller Human-Power

Warranty:

MHP fairings and mounting hardware are warrantied against manufacturer's defects for one year after purchase. MHP Fairings are warrantied against cracking for one year if installed properly on MHP mounting hardware.

Disclaimer:

In no event shall Mueller Human Power be liable for any indirect, incidental or consequential damages from the sale or use of the product.



Figure 3