


Mueller
Human-Power

4893 Artino Ct. Eureka CA 95503
Toll Free 877-267-1642 email: mhp@Windwrap.com

Windwrap® UB03 Instructions

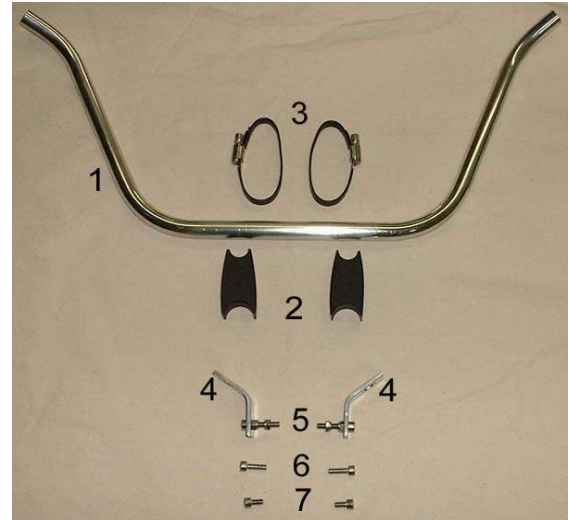

Thank you for choosing a Mueller Human-Power windscreen. Upon unpacking, allow your fairing to straighten out for a while before installing. You may want to leave the paper mask on until the fairing is completely installed to reduce scratching.

Handling:

Polycarbonate is one of the toughest plastics but it still scratches easily when compared to glass or metal. So handle carefully. Do not to slide things across the surface. Wash your hands to remove any dirt that may cause scratches. You can touch the Polycarbonate with your hands without scratching if you don't slide them across the surface.

Installing Mounts:

Open each Band Clamp and place around the handle bar, with the screws facing up and on the forward side of the handle bar. Lace the Moustache bar through the Band Clamps, such that the ends of the Moustache bend forward when the Moustache is in the upright position. Place each support block between the handle bar and Moustache. Note that the large radius goes towards the handle bar. Center the Band Clamp over each block and center the Moustache bar over the handle bar then tighten the Band Clamps just enough to keep the Moustache from moving loosely. (Figure 1)

Next attach the tabs to the front fork drop outs. Depending

Parts List

- | | |
|------------------------|------------------------------|
| 1. Moustache 1 each | 5. Long Adjustable M5 screws |
| 2. Blocks, 2 each | 6. M5 x 14mm Screws |
| 3. Band Clamps, 2 each | |
| 4. Lower Tabs, 2 each | |

on the style forks, it may be necessary to use the short screws provided or use the longer screws with Nylock nuts to attach the tabs. Leave the tabs slightly loose for fitting the fairing. (Figure 2)



Figure 1.



Figure 2

Next attach the wing screws, washers and nuts to the fairing with the wings towards the outside of the fairing and the expanding nuts to the inside.

Next, attach the fairing to the Moustache ends then attach the fairing to the tabs. It is important that the ends of the Moustache and the tabs meet the fairing as flatly as possible. It may be necessary to swing the Moustache forward or

back to accommodate the fairing.. To accomplish this it may also be necessary to rotate the support blocks around the handle bar to raise or lower the Moustache. It is also important that the alignment between the handle bars and front forks is straight. Once the fairing is supported properly, tighten the Band Clamps and tabs, checking that as you tighten them you do not cause changes in positioning. (figure 1,3)



Figure 3

Fairing Installation:

Install the Windwrap® UB03 using rubber expanding nuts as shown below. Tighten the nylon screws until the rubber nut will not pull out of the hole in the mounting hardware. The minimal tightness to achieve this is best.

Clean Up:

Any finger prints may be cleaned with the soft cotton rag and

denatured alcohol. Keep alcohol away from the decals. Toothpaste can be used to smooth out scuffs.

Transport and Care of your MHP Fairing:


Save the box and foam sheet that the fairing was shipped in. When you transport your bike on the car remove the fairing from the bike. Put the screws, washers and nuts in a baggy, roll the fairing in the foam sheet and place the fairing in its box.

To keep your fairing in top shape handle it as little as possible. Wash with window cleaner and a soft cloth. If fairing is very dusty or muddy wash with hose or in shower, flowing plenty of water over the fairing while lightly wiping with soft cloth. Toothpaste will remove some scuffs. Also scratch removal compounds can be found or ordered at these places: art supplies (picture framing,) auto supplies, motorcycle shops, and plastic shops.

If things just aren't working right give me a call toll free. I will do my best to help you out. 1-877-267-1645


Wishing you lots of bug free smiling!

Mark E. Mueller

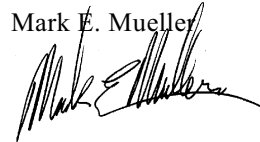

owner, Mueller Human-Power

**Rubber Nut and Wing Screw Set
Order of Assembly**

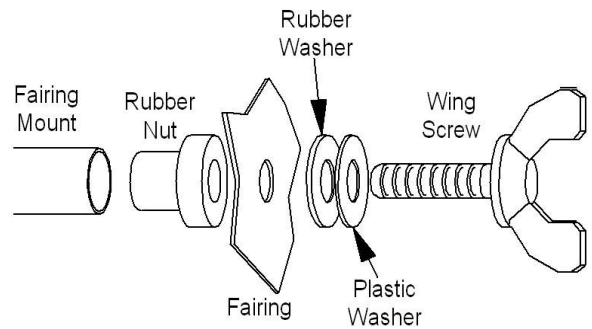

Warranty:

MHP fairings and mounting hardware are warranted against manufacturer's defects for one year after purchase. MHP Fairings are warranted against cracking for one year if installed properly on MHP mounting hardware.

Disclaimer:

In no event shall Mueller Human Power be liable for any indirect, incidental or consequential damages from the sale or use of the product.